Technical Manual
Entra Center Two

ACOUSTIC & ELECTRICAL SPECIFICATIONS:

• Nominal Impedance	8Ω
• Max Amp Power	150 watts*
• Frequency Response	80Hz – 20kHz (±3dB)
• Sensitivity	90dB (2.83V @ 1 meter)
• Crossover Frequency	2,000Hz; 24dB/Octave

SYSTEM COMPONENTS:

• Cabinet	ENTRA CENTER TWO (Not for Sale)
• Grille, Gray	338767-001
• Low-Frequency Transducers	Dual 5-1/4" (133mm) CMMD,™ shielded 335764-001
DC Resistance	9.8 ohms ±10%
• High-Frequency Transducer	3/4" (19mm) CMMD,™ shielded 336417-001
DC Resistance	3.3 ohms ±10%
• Crossover Network	338768-001

AURAL SWEEP TEST SPECIFICATIONS:

• System Aural Sweep Test	6.0V Input 80Hz to 20kHz
• L.F. Aural Sweep Test	5.0V Input 80Hz to 3kHz
• H.F. Aural Sweep Test	2.83V Input 2kHz to 22kHz

PHYSICAL SPECIFICATIONS:

• Dimensions (H x W x D)	7-1/2" x 20-1/2" x 7-1/4" (191mm x 521mm x 184mm)
• Weight	18 lb (8.2kg) Each

WARRANTY:

- Refer to Warranty Statement packed with each product.

* The maximum recommended amplifier power rating will ensure proper system headroom to allow for occasional peaks. We do not recommend sustained operation at these maximum power levels.

PACKAGING

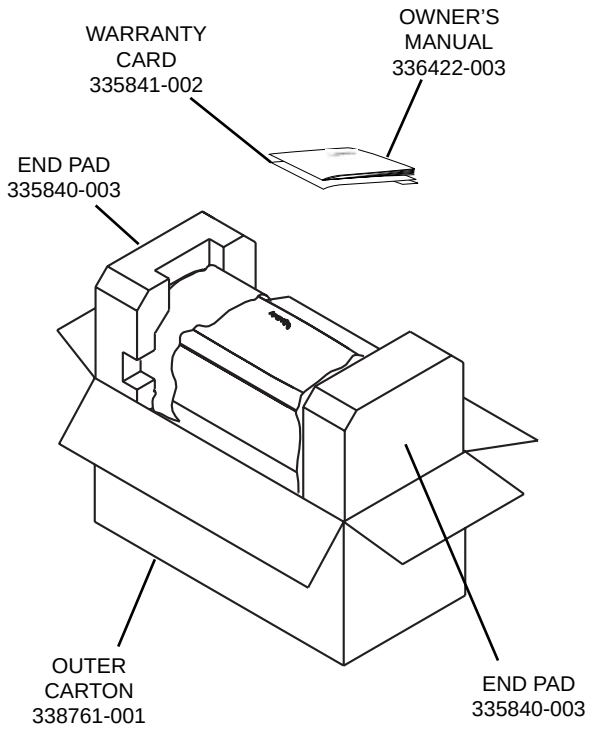

ENTRA CENTER TWO WIRING DIAGRAM

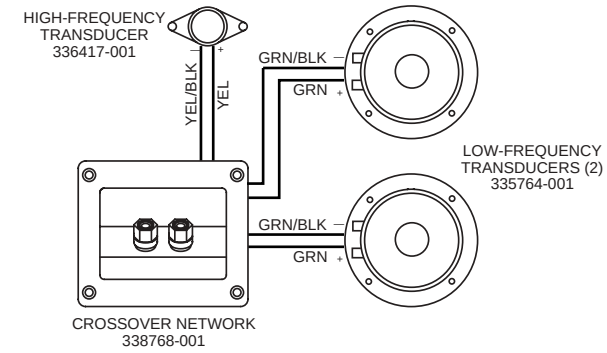

ENTRA CENTER TWO SCHEMATIC

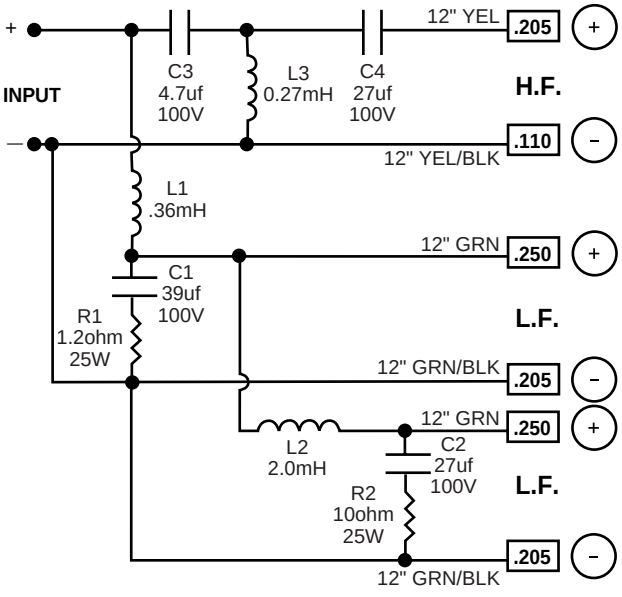

Entra Center Two

Technical Manual
Entra Center Two
EXPLODED VIEW

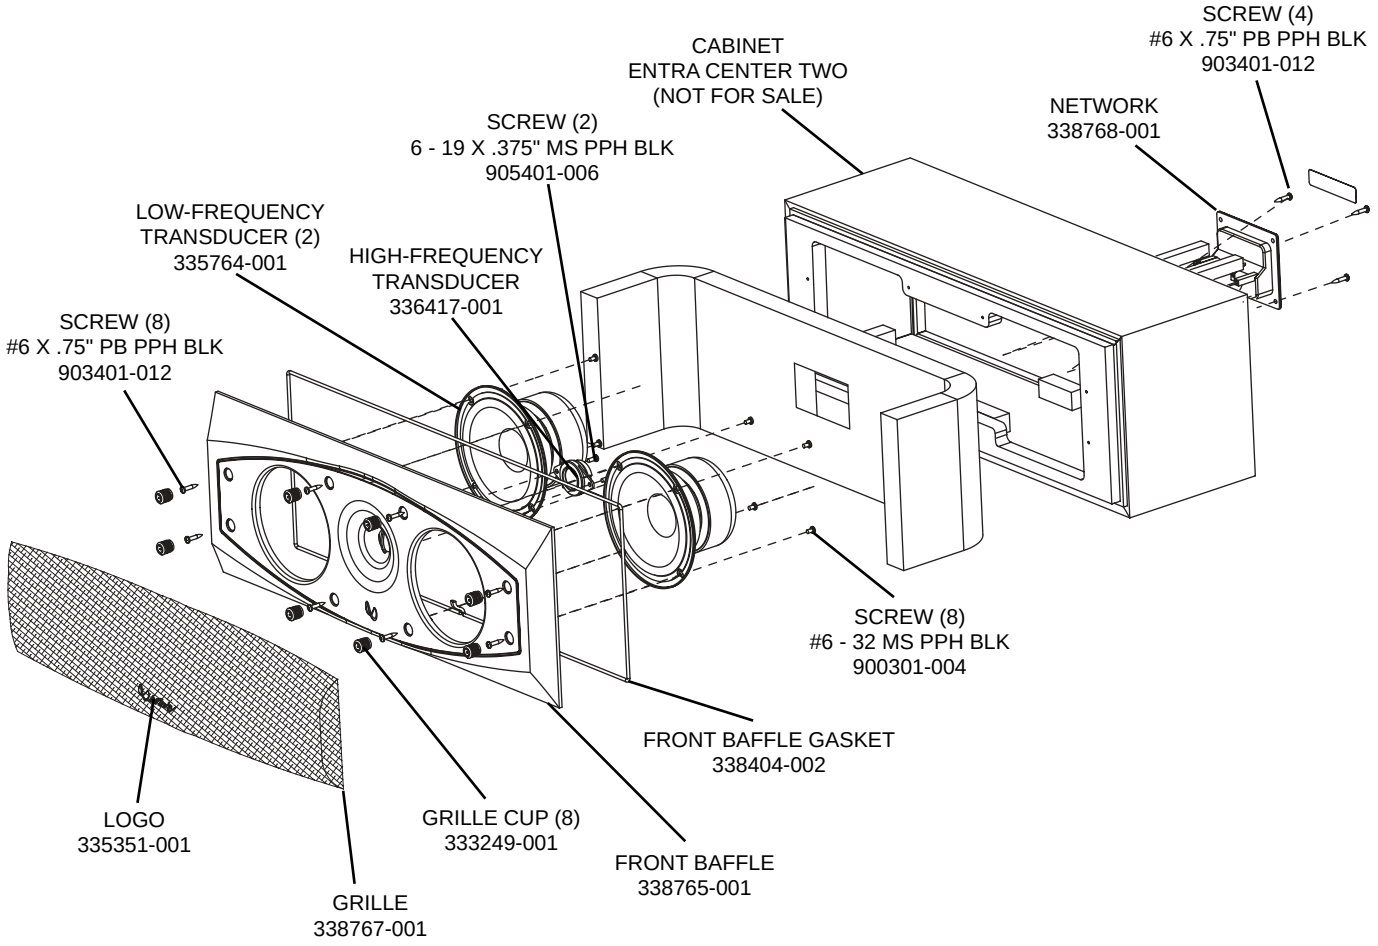

TO SERVICE THE ENTRA CENTER TWO

1. Remove the grille.
2. Remove all (8) rubber grille retainer; this can be accomplished by carefully pulling them out of their cavities with long-nosed pliers or similar tool.
3. Remove the (8) Phillips screws that are now exposed.
4. Carefully lift the front baffle, with tweeter and woofers attached, off the cabinet.
5. If necessary, remove all of the Phillips screws holding the woofers to the baffle.